



# Olympus Camedia D560 LCD Screen Replacement

We will demonstrate removal of the LCD screen.

Written By: GradStudents2011



## INTRODUCTION

We will show how to tear down to and remove the LCD screen.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Anti-Static Project Tray](#) (1)
  - [Spudger](#) (1)
  - [Tweezers](#) (1)
  - [iFixit Opening Tools](#) (1)
-






## Step 1 — LCD Screen



- Unscrew all immediately visible screws on the body of the camera.
- Locations (# of screws): Bottom of camera (3), left side near video port (2), under cover of USB slot (3), memory card slot (1).

## Step 2

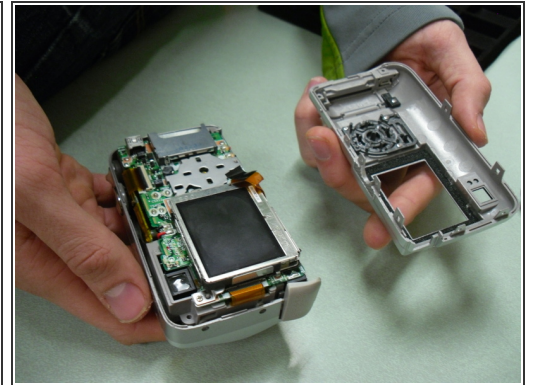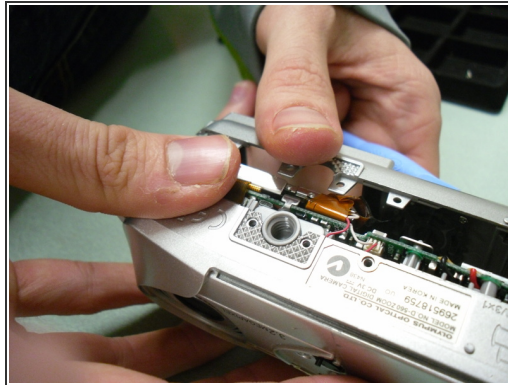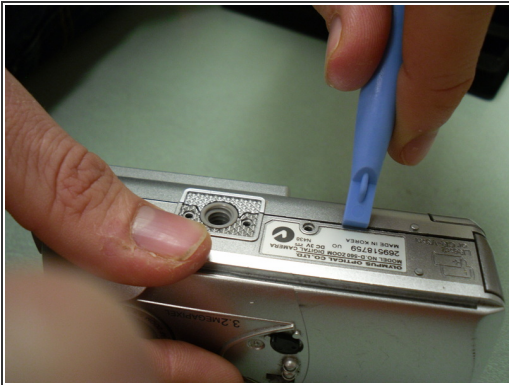

- Use the plastic opening tool to separate the back cover from the camera.

## Step 3



- With the back plate off, locate two screws: one diagonal from the top left of the LCD screen and one diagonal from the top right of the LCD screen.
- Unscrew both of these screws.


## Step 4



- Flip the LCD screen over.





## Step 5

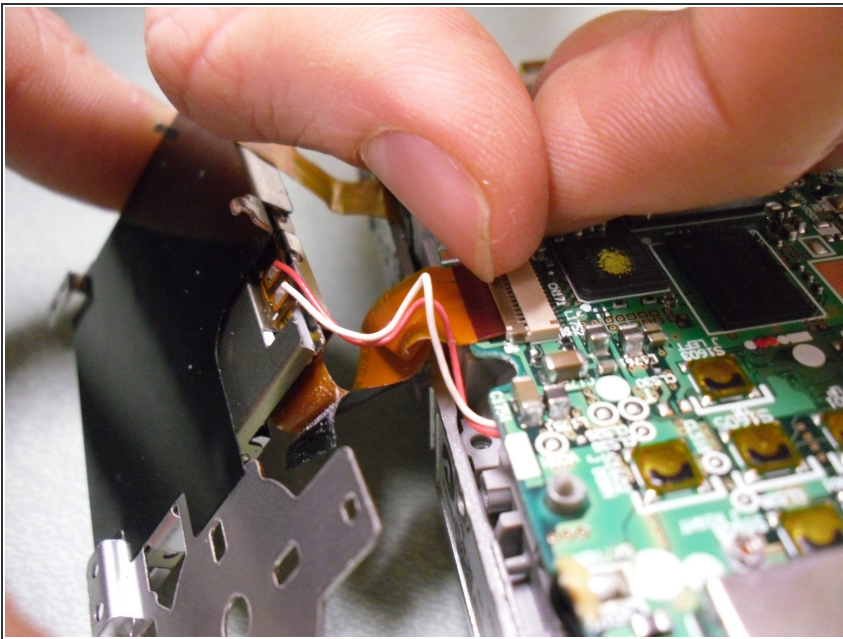


- Undo the clip holding the ribbon cable that attaches the LCD screen to the motherboard.

## Step 6

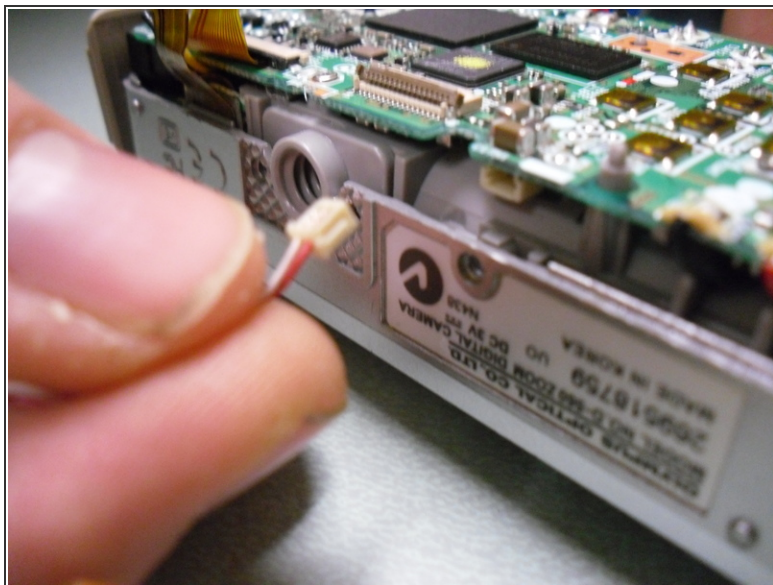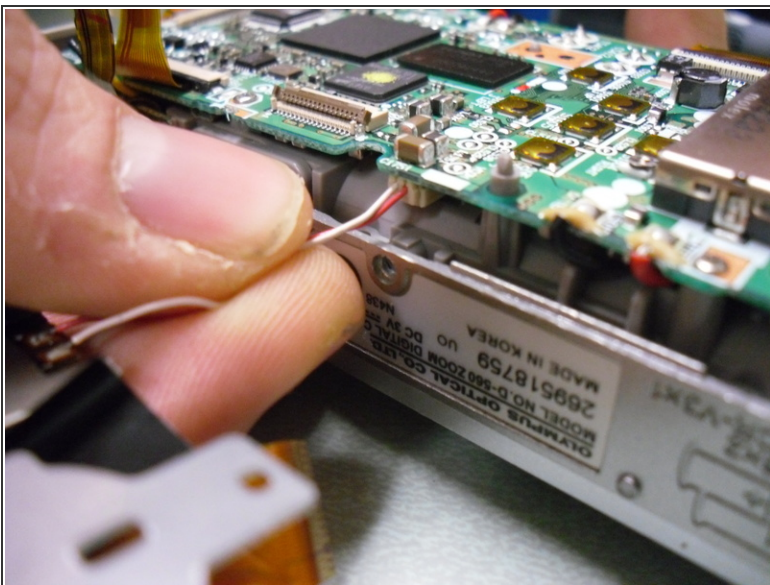

- Unclip the plug attached to the red and white wires that connects the LCD screen to the motherboard.

## Step 7

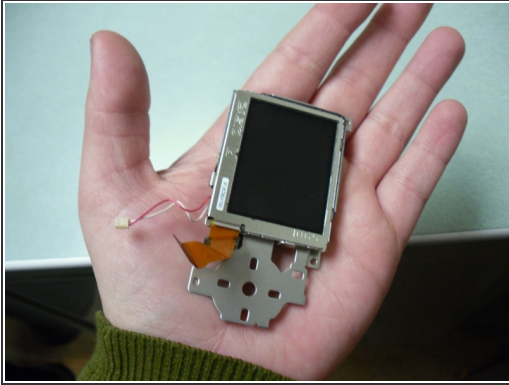

- The LCD screen housing should now be free of the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 09:25:00 PM.